

antenna is to be attached.

RAMI, Inc. P.O. Box 858 Grand Haven, MI 49417-0858 (616) 842-9450 www.rami.com

## AV-569 MARKER BEACON (BOAT TYPE)


Frequency: 75 MHz

## **Installation Instructions**

- 1.) Locate mounting position on flat surface of the aircraft fuselage.
- 2.) Using the template provided, drill two mounting holes, one hole for the connector and one hole for the adjustable capacitor.

  Note: Be sure to mount correctly using the "Front of Aircraft" noted on the template.
- 3.) Mount the antenna by placing the rubber pad provided between the antenna base and the aircraft fuselage. Insert hardware provided as shown below and tighten securely.
- 4.) Using RG-58/U cable or similar 50 ohm coax cable (not supplied), attach a BNC type connector (Delta Electronics #UG-88/U or equal, not supplied) to one end. See connector supplier for appropriate mounting instructions.

  The other end of the cable must have a connector attached to match the connector to which the

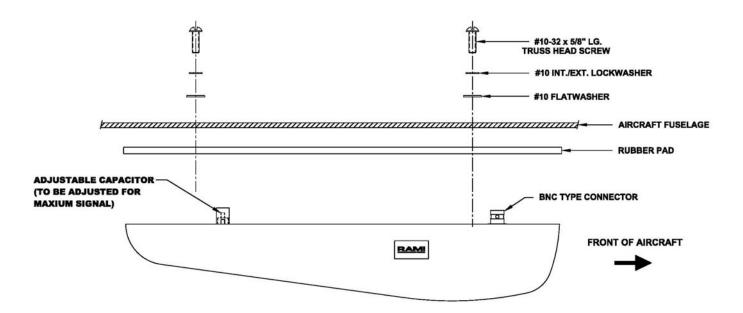

Document #27-2133-1 Rev.: C Revised: Feb. 2014