



User Manual: TTL-300-ATG-I

1. Firmly press and hold black tipped straight chuck onto tire valve stem.
(Caution: Do NOT use to check pressure over 300 PSI)
2. Read / check pressure.
3. Remove from valve stem.
4. Store in a dry place.