



SAFE 328

Avionics Cooling Fan

Installation Manual

This document and the information contained herein is the proprietary data of SANDIA aerospace Corporation. No part of this document may be transmitted, reproduced, or copied in any form or by any means without the prior written consent of SANDIA aerospace. Due to SANDIA aerospace's continued product and quality improvement programs, information contained in this document is subject to change without prior notice
Copyright 2010 SANDIA aerospace Corporation, All rights reserved. Printed in USA

Record of Revisions

Revision	Date	Description	Approval
B	20060926	DRN287	J. Fiala
C	20130502	ECN3974	L. Harrison
D	20130625	ECN3987	L. Harrison
E	20140826	ECN4152	L. Harrison

Table of Contents

Record of Revisions.....	1
Table of Contents	2
List of Illustrations.....	2
1.0 Introduction	3
1.1 Product Description.....	3
1.2 Technical Characteristics.....	3
1.2.1 Physical Characteristics.....	3
1.2.2 Operational Characteristics	4
1.2.3 Certification.....	4
2.0 Installation Procedures	4
2.1 General	4
2.2 Equipment Required.....	4
2.2.1 Supplied.....	4
2.2.1 Required but not supplied	4
2.3 Mounting	4
2.4 Electrical.....	5
2.5 Calibration.....	5
2.6 Continued Airworthiness.....	5

List of Illustrations

Figure 1-1	Dimensions for S/N 101-9999 and 200000 and Up.....	3
Figure 1-2	Dimensions for S/N 10001-19999	3
Figure 2-1	Connector item Part Numbers.....	4

1.0 Introduction

This sheet describes the installation of the SAFE 328 Blower with fault detection output. It is intended for use by FAA certified repair stations to install the SAFE 328 and includes both mechanical and electrical installation information. The installer should insure that the SAFE 328 is operating according to its intended function.

1.1 Product Description

The SAFE 328 is an avionics cooling fan that provides an operating indication. When the fan is normally operating, this output is at low impedance. The output goes to high impedance whenever the RPM of the motor drops below a preset threshold, signaling the connected avionics of the reduction in cooling from the SAFE 328.

1.2 Technical Characteristics

1.2.1 Physical Characteristics

Width 1.25" Height 4.75"

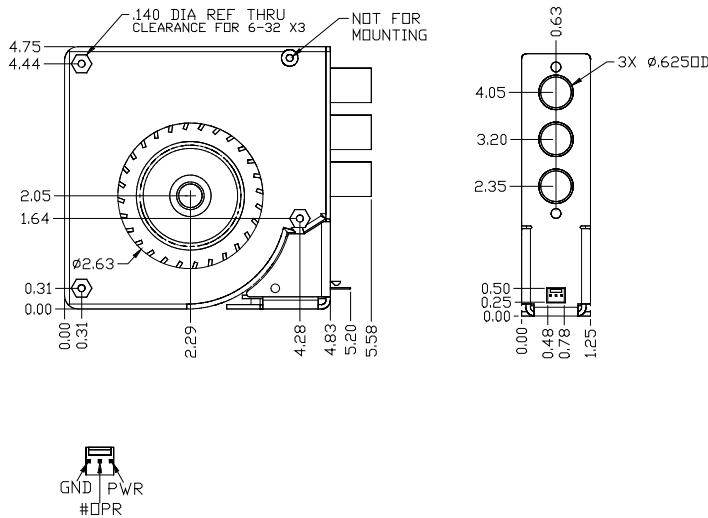


Figure 1-1
Dimensions for Serial Numbers 101 - 9999 and 20000 and Up

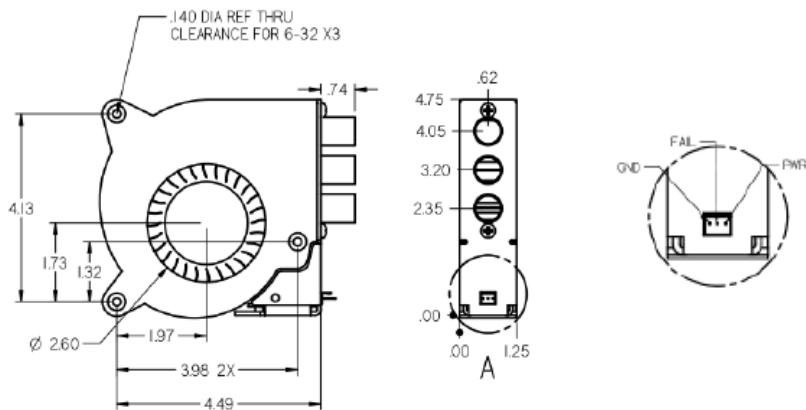


Figure 1-2
Dimensions Seraial Numbers 10001 - 19999

1.2.2 Operational Characteristics

Operating Voltage 22-31Vdc

Current Operating .400 Amps Nominal

Start-up .550 Amps

Air Flow (All Ports) 20 CFM No Static Pressure (10CFM @ .08 H₂O Static Pressure)

Operating Temp -20 to +55° C

Max Operating Altitude 55,000 Feet

1.2.3 Certification

FAA-PMA PQ0894SW Diamond DA40

DO 160D [F1]BAA[S2R2U(F,B2,M)]XXXXXXXXZBAZA[XX]M[XXXX][XX]XX

2.0 Installation Procedures

2.1 General

The SAFE 328 is supplied with a mounting connector and four contacts. Only three contacts are required and the spare one is provided in case one is destroyed during installation. The SAFE 328 is mounted with three (3) number 6 or 8 screws. Cooling air is ducted to the device to be cooled using aircraft approved tubing. Unused ports should be capped.

2.2 Equipment Required

2.2.1 Supplied

SAFE 328 System Includes:

SAFE 328 Fan305467-00

Installation Kit 305477-00

Mating Connector 305479-03

Mating Pins 305478

2.2.1 Required but not supplied

Three (3) Number 6-32, 8-32 or equivalent mounting screws

2.3 Mounting

The SAFE 328 mounts with three (3) number 6-32 or 8-32 or equivalent machine screws.

Description	Manufacturer	Series Number	Manf. Part Number	Sandia Part Number
Connector Housing	Molex	2695	22-1-3037	305479-03
Crimp Contact	Molex	2759	08-50-0114	305478
Hand Crimper Tool	Molex	NA	*11-01-0185 or CR2262C	NA
Extraction Tool	Molex	NA	*11-03-0022	NA
Insertion Tool	Molex	NA	*63812-0000	NA

Figure 2-1
Connector item Part Numbers

2.4 Electrical

The SAFE 328 operates on 28Vdc. It will provide a low on the Fan Fail pin (center pin) of the connector when operating normally. When airflow drops to 65% of nominal, as determined by fan RPM, the Fan Fail pin will output a high. An external pull-up is required. Power to SAFE 328 can be supplied from the aircraft buss or from the unit to be cooled if an output is available. If connected to the aircraft buss, the SAFE 328 should be protected by a 1.0 amp fuse or breaker.

2.5 Calibration

No calibration of the SAFE 328 is required. The unit is tested by slowing the fan manually and observing a high on the Fan Fail pin . Allow the fan to return to normal speed and observe a low on the Fan Fail pin.

2.6 Continued Airworthiness

Maintenance of the SAFE 328 is on condition only. No scheduled maintenance is required.